

## Front Panel Programming of the IC-F3GT and IC-F4GT

For Release to Dealers Only

### Set Mode

1. Entering Set Mode - Press both the **P0** and **#** buttons while turning on the radio. This will give a display of "dEALER". Enter the 6 digit Dealer Passcode. The default passcode is "159357". If successful, the display changes to "SEtmOdE". If unsuccessful, the display does not change, and the unit must be turned off and on to try again. The unit will not function as a radio in Set Mode. While the display shows "SEtmOdE", pressing **P0** puts the unit into programming mode, showing "ch01".

2. Channel selection - Press **P3**, and the channel number then flashes. Use the **UP** and **DOWN** keys to set the channel number. If the radio is in a Bank mode, the bank number will appear at the far left, and the bank can be changed with the **P1** key while the channel number is flashing. Press **P3** again when the correct bank and channel number is showing.

### 3. Channel programming

The **UP** and **DOWN** keys cycle the display through the various channel settings for the selected channel, such as:

Function	Setting	Options (changed by <b>P2</b> )
channel	ch01	normal, or inhibit (shows a dot before the ch)
receive	154,1000	R OFF or a frequency
transmit	154,1000	INH or a frequency
rx tone	RC 1230	RC (CTCSS), RD (DTCS) or RC OFF
tx tone	TC 1230	TC (CTCSS), TD (DTCS) or RC OFF

- The above values are typical.